


Core Configuration Manager (CCM)

Configuration Software for FreeSpeak Edge Base Station and Arcadia



Linking
People
Together



CCM Configuration Software

Key Features and Benefits

- Browser-based configuration tool
- Supports latest versions of all major web browsers
- Multiple administrator monitoring
- System global health status page
- Diagnostics logs
- Password protected

The Core Configuration Manager (CCM™) is an integrated, browser-based software utility for enabling rapid setup, configuration and monitoring of Clear-Com Systems.

Description

The Core Configuration Manager (CCM) for the FreeSpeak Edge® Base Station and the Arcadia® Central Station has an intuitive user interface with a consistent design for a quick and simple means of configuring the base station with role-based belt packs, including save and restore, text messaging, individual belt pack and group call signal and remote mic kill. From the status page, the user can see key statuses of all volume levels from all belt packs in one view.

Role-based Configuration

A role is a labeled configuration set which can be assigned to any device of the same type within the system, either by the system administrator or an operator (if enabled). The configuration of system endpoints using roles is not only an intuitive method of configuring and managing devices, but also enables the repurposing of hardware and rapid deployment of devices within a system.

In this version of the CCM, roles can contain two different kinds of belt packs (i.e. FreeSpeak II® and FreeSpeak Edge). The system intelligently routes the audio to

Technical Specifications


Supported Browsers (latest versions)

Chrome
Safari (MacOS and iOS)
Firefox
Microsoft Edge
Opera

Core Configuration Manager (CCM)

Configuration Software for FreeSpeak Edge Base Station and Arcadia

Core Configuration Manager (CCM)

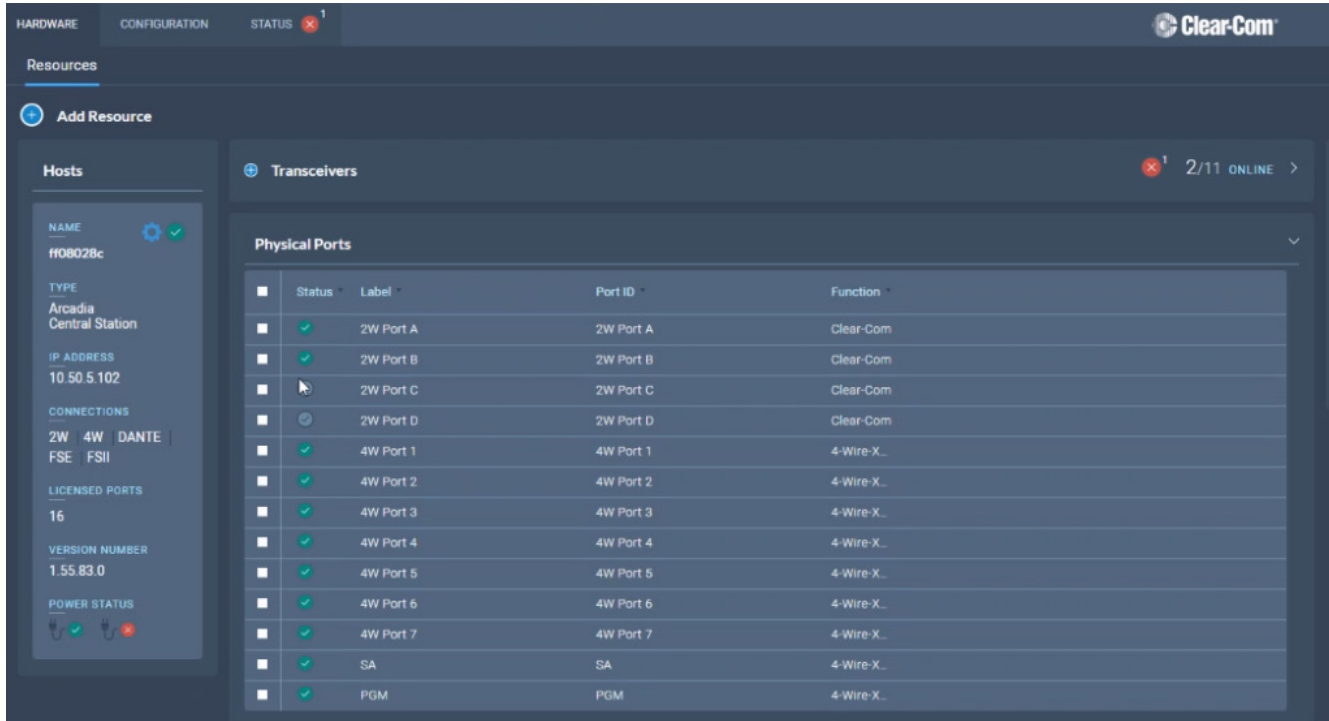

4W				
+	✓	4W Port 1	4W Port 1	None
+	✓	4W Port 2	4W Port 2	None
+	✓	4W Port 3	4W Port 3	None
+	✓	4W Port 4	4W Port 4	None
+	✓	4W Port 5	4W Port 5	None
+	✓	4W Port 6	4W Port 6	None
+	✓	4W Port 7	4W Port 7	None
SA				
+	✓	SA	SA	None
PGM				
+	✓	PGM	PGM	None

CCM with Stage Announce and Program



Stage Announce inside a Channel

Order Code

CCM is included in the following:
 FSE-BASE
 ARCADIA-XX-XXP