

# HelixNet<sup>®</sup> 2.1

## INDUSTRIAL KB STATION

### Quick Start Guide

The following Quick Start Guide provides basic instructions for your HelixNet 2.1 system. It covers the following:

- HelixNet INDUSTRIAL KB STATION (IKB-12P)
- HelixNet 2.1 topology

**Note:** For more information, see the *HelixNet 2.1 (IKB-12P) INDUSTRIAL KB STATION User Guide*.

## 1.1 Installing the KB Station

The station can be installed either:

- Mounted in an enclosure for desktop use
- Mounted inside a wall box.

There are four mounting holes **(A)** located at each corner of the unit that enable you to fix the unit to your existing desktop or wall-hanging enclosures.

Ensure that a handset is connected to the handset connector **(B)**.

By default, DHCP is enabled and the station automatically pairs to the first HMS-4X Main Station it finds. You can change this setting in the **Networking** menu.



## 1.2 Configuring the KB Station

To place the INDUSTRIAL KB STATION in **Menu Mode**, or exit **Menu Mode**, press the **Rotary Control (B)** for approximately four seconds. Use the **OLED Menu Displays (A)** as follows:

- To navigate up or down the list of menu options, turn the **Rotary Control** clockwise or counter-clockwise respectively.
- To select a menu option, or to open a list of submenu options, briefly press the **Rotary Control**.
- To return to the previous menu, press the **Rotary Control** for approximately 0.5 s.

**Note:** You can also configure the KB Station using the browser-based Configuration Editor. For more information, see the HelixNet 2.1 (IKB-12P) INDUSTRIAL KB STATION User Guide.



## 1.3 Operating the KB Station

Note: Before using the station, go to the **Profiles** menu and select a **Profile**.

### To make an outgoing call:

- 1) Lift the handset from its cradle
- 2) Press and hold one of the **Talk keys (D)**. The call is routed to all INDUSTRIAL KB STATIONS whose profile is assigned to the key
- 3) When you receive a reply, press the **Push-To-Talk button (A)** and speak into the microphone.
- 4) When the call is finished, replace the handset onto the cradle.

### To answer an incoming call:

If there is an incoming call the **OLED Display (B)** will indicate this. If there is more than one incoming call, the **OLED Display** cycles through the caller IDs. If the buzzer is enabled, you will also receive an audible notification. To answer the call:


- 1) Lift the handset from its cradle and press the **Push-To-Talk button (A)** on the handset.
- 2) Replace the handset when the call is over.



### To adjust the volume level:

- To increase the volume level, turn the **Rotary Control (C)** clockwise.
- To decrease the volume level, turn the **Rotary Control (C)** counter-clockwise.

## 1.4 Quick reference to topology

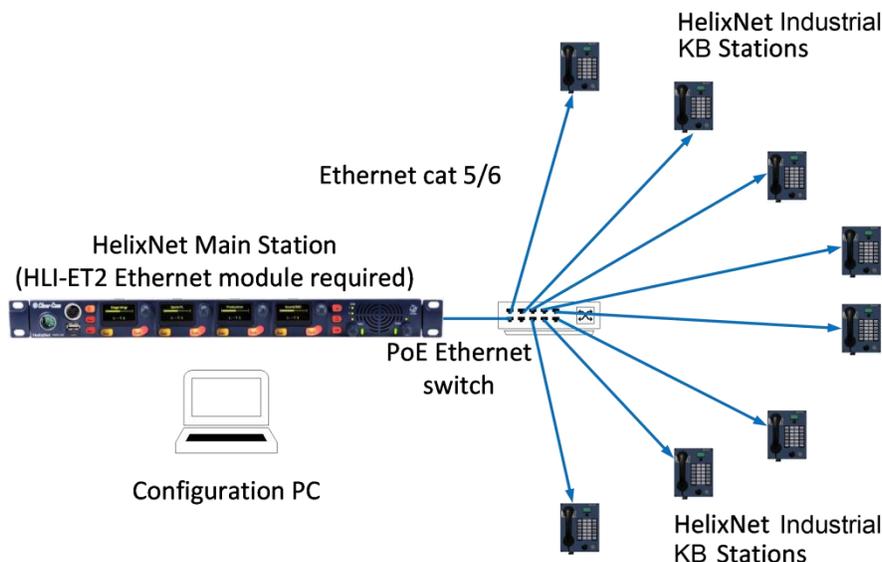

Copyright © 2016 HME Clear-Com Ltd. All rights reserved.