 



FreeSpeak Family Base Station Options



FreeSpeak II Base II 5-Up System

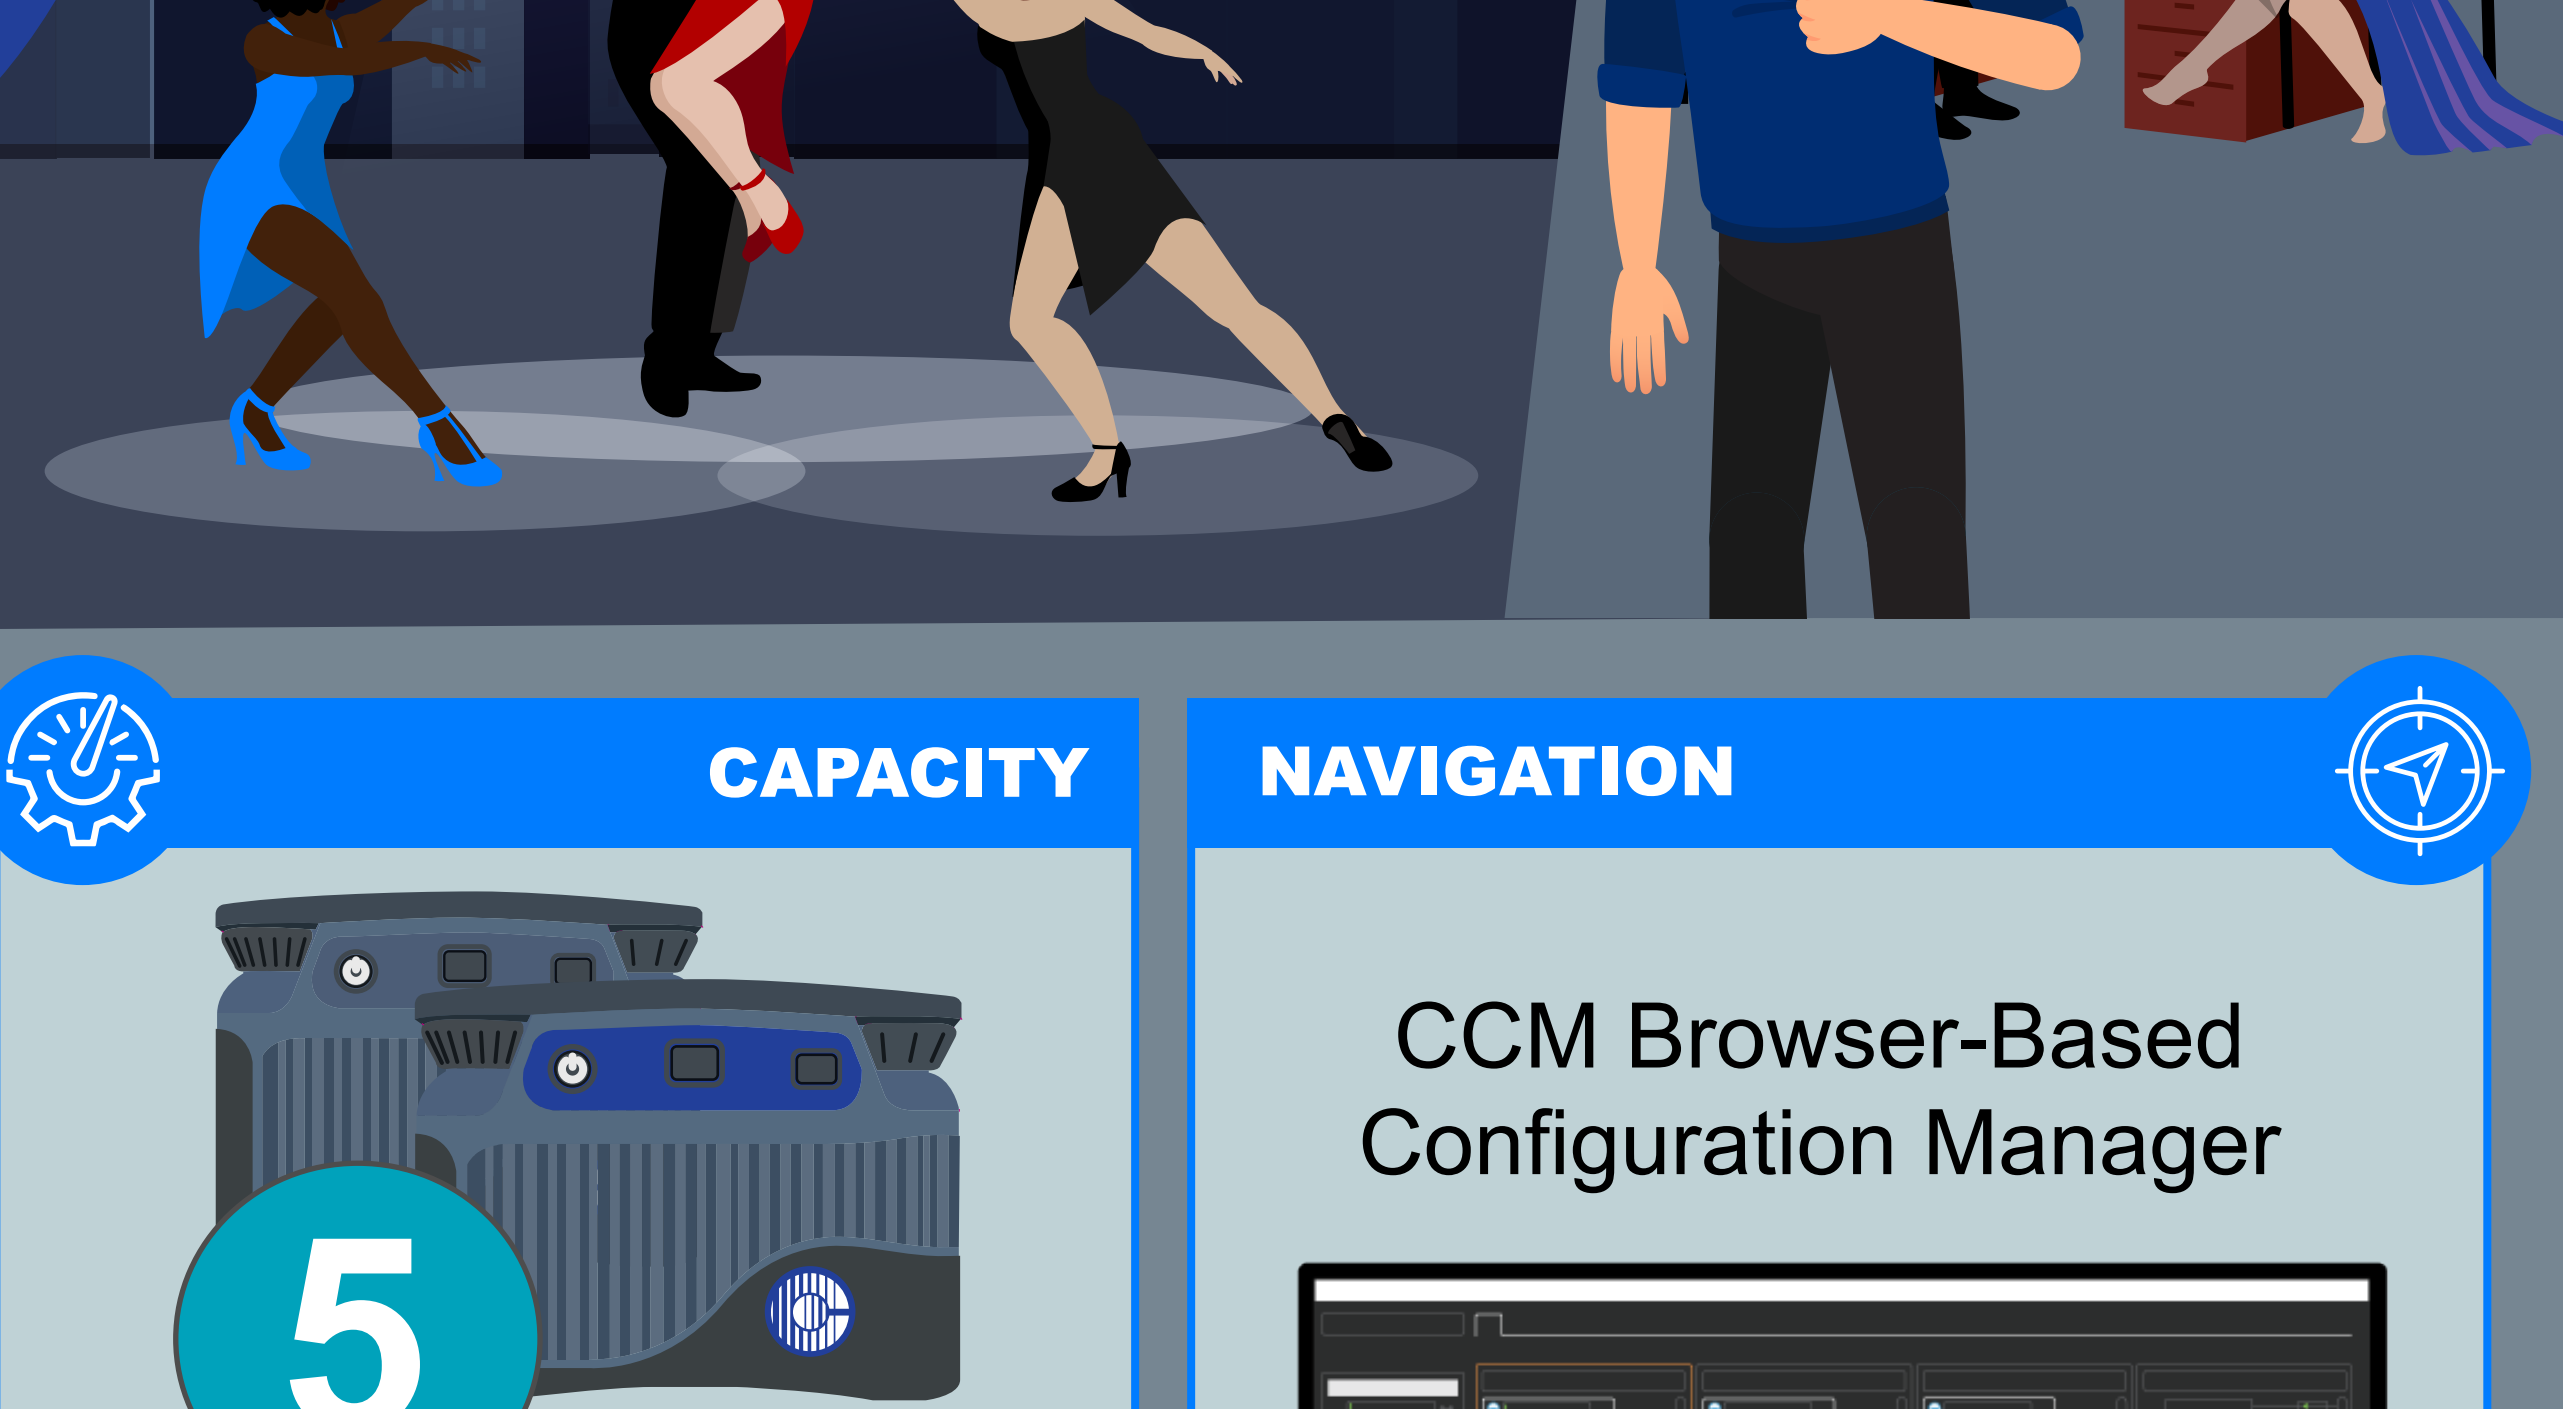


<p>CAPACITY</p> <p>5 10</p>	<p>NAVIGATION</p> <p>CCM Browser-Based Configuration Manager</p>
<p>EXPANDABILITY</p> <p>Expandable to FreeSpeak II Base</p> <p>5 → 25+</p>	<p>CHANNELS/GROUPS</p> <p>12 Channels</p> <p>4+ Channels</p>
<p>TRANSCIVERS</p> <p>E1</p>	<p>BANDS</p> <p>1.9 GHz</p> <p>2.4 GHz</p>
<p>AUDIO QUALITY</p> <p>7 KHz</p>	<p>BUDGET</p> <p>Low cost entry solution with expandability to FSII</p>

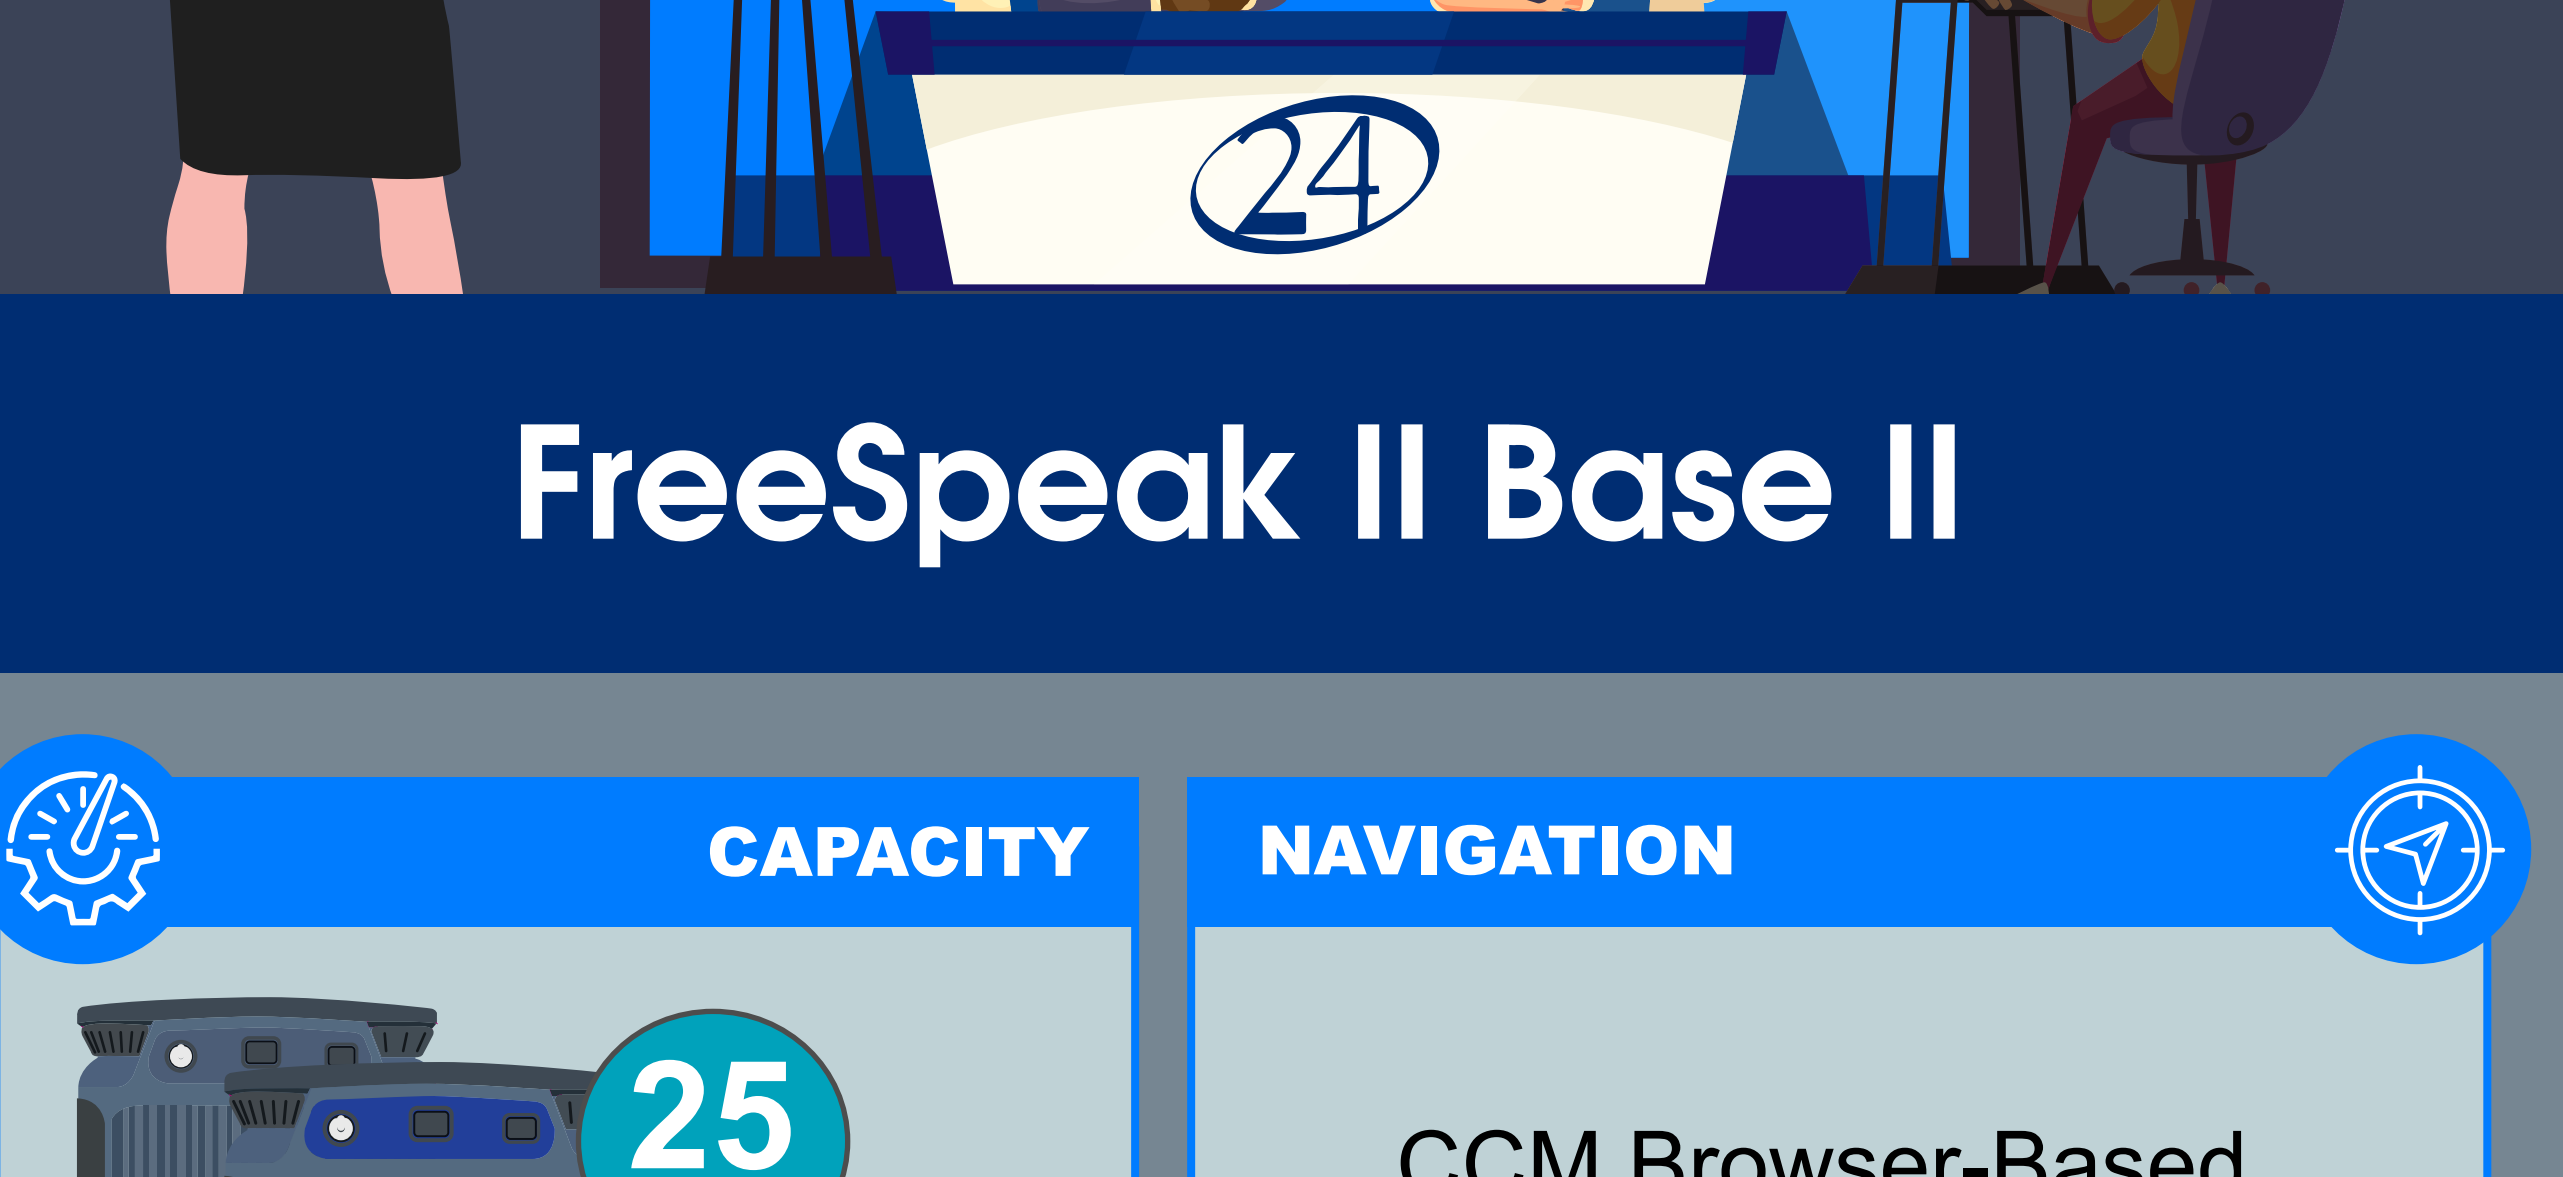 

FreeSpeak II Base II

<p>CAPACITY</p> <p>25 (US) 50 (EU) 10</p>	<p>NAVIGATION</p> <p>CCM Browser-Based Configuration Manager</p>
<p>EXPANDABILITY</p> <p>Not Expandable</p> <p>25+</p>	<p>CHANNELS/GROUPS</p> <p>12 Channels</p> <p>4+ Channels</p>
<p>TRANSCIVERS</p> <p>E1</p>	<p>BANDS</p> <p>1.9 GHz</p> <p>2.4 GHz</p>
<p>AUDIO QUALITY</p> <p>7 KHz</p>	<p>BUDGET</p> <p>GOLD STANDARD Best overall value</p>

 FreeSpeak Edge Base Station

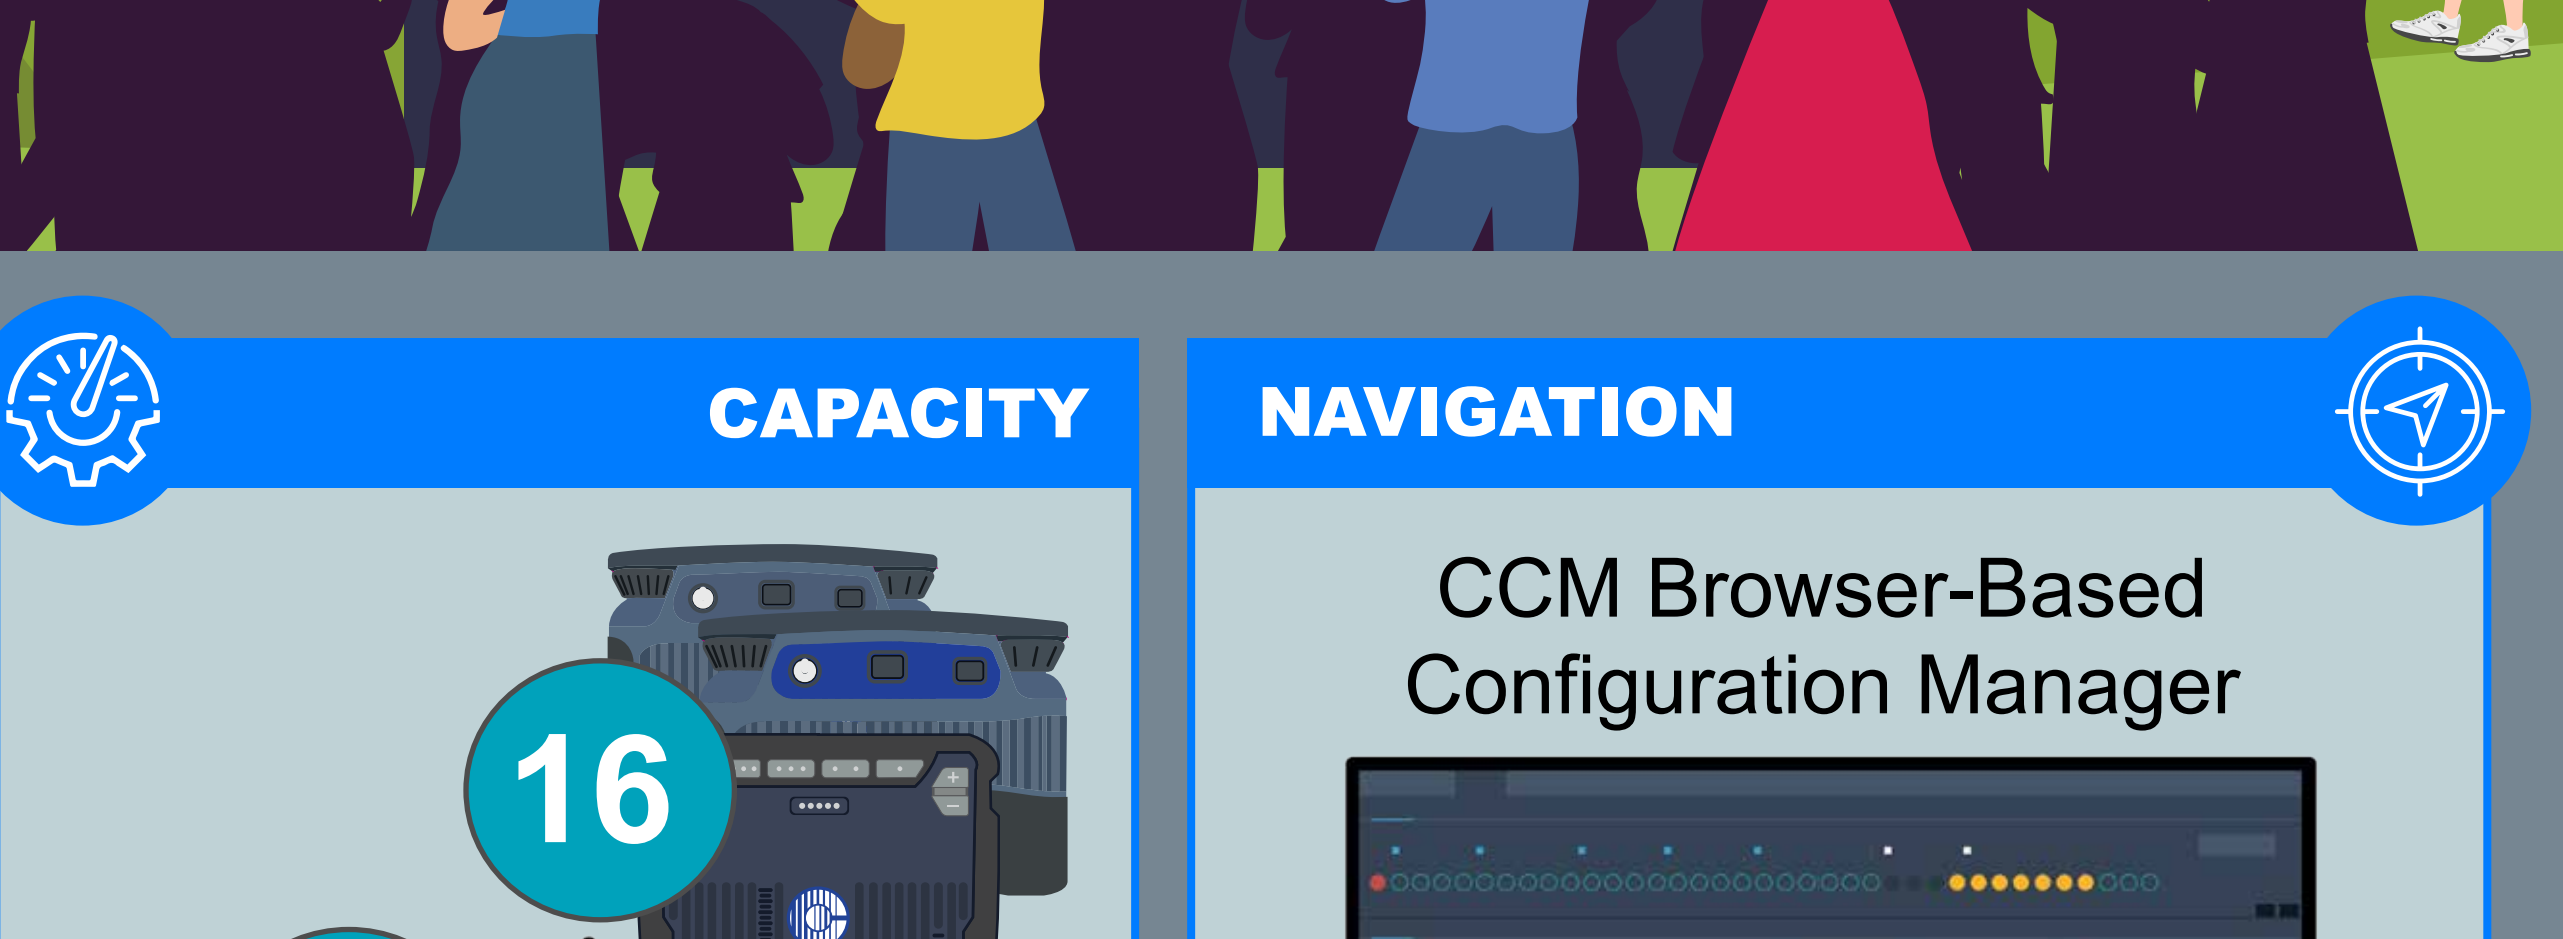

<p>CAPACITY</p> <p>16 6 10</p>	<p>NAVIGATION</p> <p>CCM Browser-Based Configuration Manager</p> <p>Touchscreen Operation</p>
<p>EXPANDABILITY</p> <p>Not Expandable</p> <p>16</p>	<p>CHANNELS/GROUPS</p> <p>100 Channels</p> <p>4+ Channels</p> <p>8+ Channels</p>
<p>TRANSCIVERS</p> <p>Base to Transceiver: Up to 500 ft (Cable Only), Up to 1500 ft (when TCVR is Powered Locally)</p> <p>Base to Transceiver: Up to 300 ft (PoE)</p> <p>Digital IP</p> <p>E1</p>	<p>BANDS</p> <p>1.9 GHz</p> <p>2.4 GHz</p> <p>5 GHz</p>
<p>AUDIO QUALITY</p> <p>7 KHz</p> <p>12 KHz</p>	<p>BUDGET</p> <p>Low Cost IP Entry to Matrix</p> <p>Dante Capability in a 1RU</p>

DANTE

Dante 8 Ports