



Dynam-EC

Quick Start Guide

The following Quick Start Guide:

- Describes how to install your Dynam-EC software.
- Provides a quick reference to the Dynam-EC screen.

Dynam-EC: Live Assignment Software

The optional Dynam-EC software enables live, on-the-fly system management. Users can perform real-time drag-&-drop routing, level adjustments, and keyset reassignments. It also features macro support and undo capabilities to simplify and speed up repetitive tasks.

For detailed information about installing, starting and using Dynam-EC, see the **Dynam-EC User Guide**.

1.1 Before installing


Dynam-EC is supported to be run and operated by the current versions of Microsoft Windows.

If you are installing Dynam-EC as an update to an existing Dynam-EC installation, ensure that you save your Dynam-EC layouts project files (*.ccr files) and all relevant EHX system configurations (*.hxn files)

1.2 Installing Dynam-EC

To install Dynam-EC on your PC:

1. Click **either**:
 - **PMSetup**. For installing Dynam-EC.
 - **EHXPMSetup**. For installing EHX Configuration Software and Dynam-EC.
2. The **Choose Install Location** dialog is displayed. The default location is **Program Files > ClearCom** on the C Drive. To select a different location, click **Browse**. To continue, click **Next**.

3. Dynam-EC starts to install. During installation, an installation progress bar is displayed []. For more detailed information about the progress of the installation, click **Show Details**.


When the installation is complete, click **Close**.

Note: On installing Dynam-EC, a firewall dialog may be displayed asking if Windows should **Block** or **Unblock** Dynam-EC. Select **Unblock Dynam-EC**.

1.3 Quick configuration reference

Note: Dynam-EC can be opened in simulation mode. This is offline and can be used for demos and to develop macros without connecting to a live system.

1. Connect to the Eclipse system

Open Dynam-EC. Select **Connect** . Select the matrices you want to connect to. Your EHX entities appear in the main screen.

2. Configure the Palette

Select **Palette**. Drag the items you want to dynamically configure from the main screen to the palette pane on the left.

3. Configure the canvas

Select **Canvas**. Drag the items from the palette (for example, partyline (conference), IFB, panel) onto the canvas.

4. Make live assignments

Note: Assignments in Dynam-EC take effect immediately.

Select **Assignment**. Drag items from your palette and drop them on controls on the canvas. For example: add or remove ports from partylines or groups, change the destination of an IFB.